


Installation of High Rate Drill Sensors

1. Cut the seed/fertiliser tube. Position the sensor in line with the two pieces of seed tube and secure with the hose clamps provided.

Note: Seed and fertiliser must enter the sensor on the same side that the cable comes out of the housing, as per the diagram below.

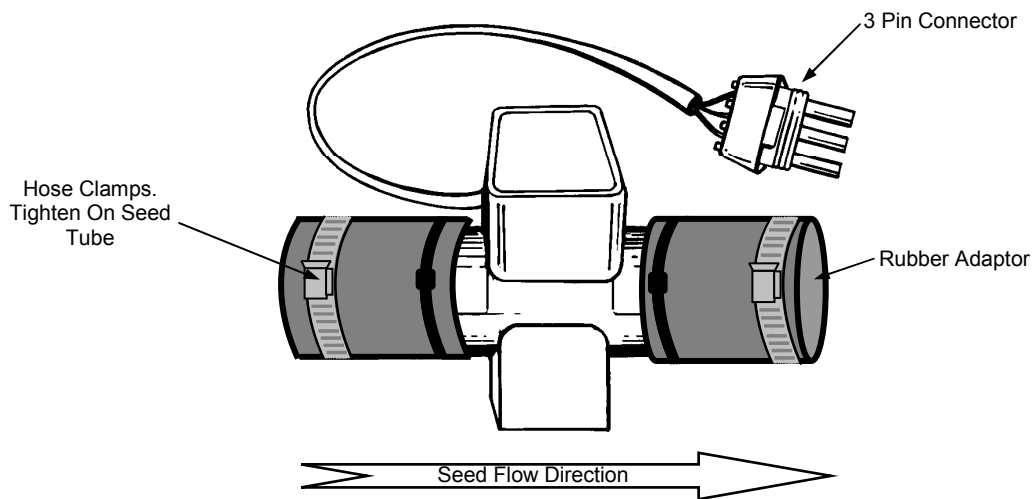

2. Connect the sensor's 3 pin weather-pak connector to the corresponding row on the planter harness. Make sure the connectors lock together.
3. Secure the sensor and harness leads away from any moving parts and potential pinch points with cable tie's.