


## ACCESSORY RPM SENSOR - 55075-2518

Supplies an accessory RPM reading to your controller or monitor.

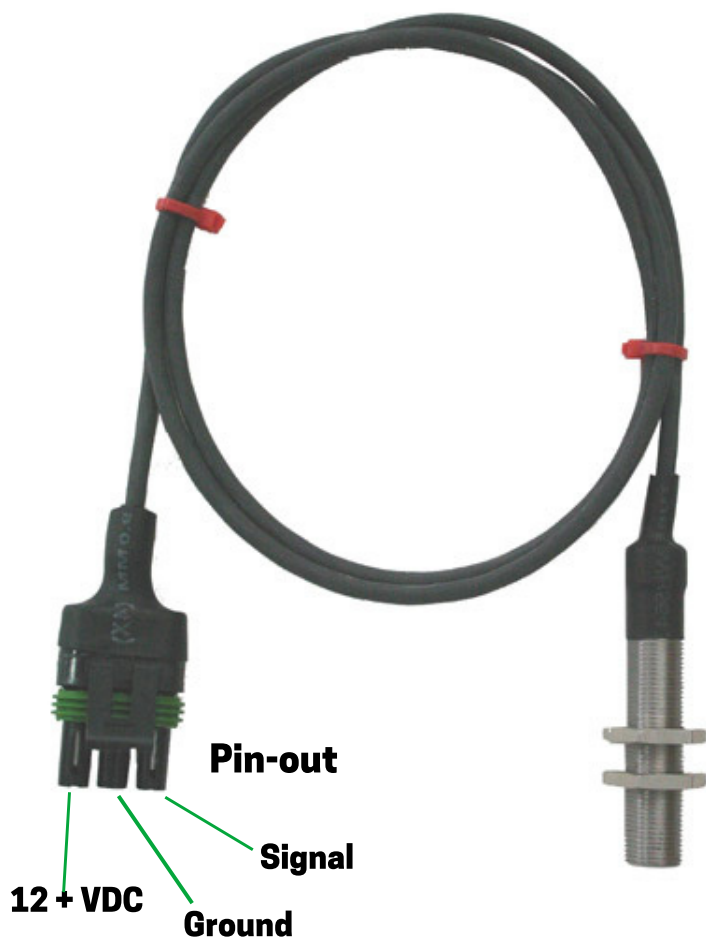

### Installation Instructions

- The gap between the sensor face and the metal projection must be **no more than 4mm**.
- If the Hall Sensor is picking up off magnets, then the sensing gap **must be 10 to 25mm**.
- If 4 magnets are supplied, space the magnets evenly around the wheel so that each magnet is **90 degrees** away from each other.

- **Please note that due to circuitry within the connector assembly, removing the connector may cause the sensor to cease to function.**

**Please contact us if you would like to order an adaptor or Rare Earth Magnet Kit.**

- Refer to the Operators' Manual of your controller or monitor to determine how to calibrate your speed sensor.