

## AIR PRESSURE SENSOR - 46682-0920CAM

The Air Pressure Sensor provides pressure or vacuum readings when installed.



### Installation Instructions

1. Mount the sensor in the desired location on the outside of the bin.
2. Drill a 10mm hole in the bin and insert the air hose fitting through the hole to the inside of the bin.
3. Tighten the nut on the inside of the bin.
4. Connect the 3 pin connector to the monitor or control system harness.

### Colour Code

RED	= Power
BLK	= Ground
GRN	= Signal

### Specifications

Input Voltage Range	= 7 - 16 + VDC
Pressure Range	= 0 - 10 KPa
Offset Voltage	= 0.2V
Output Voltage	= 0.47V / KPa