


## Weather-Pack Connector Wiring Instructions

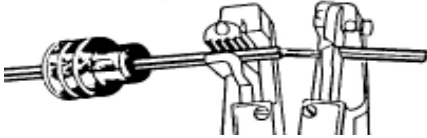

Insert cable seal onto wire. Move the seal away from the wire's end, and strip approximately 5mm of wire insulation. Be careful not to cut wire strands.




Move seal back to the end of the insulation remaining on the wire.




Place terminal in Weather Pack crimp tool. Position crimp points and seal.



Examine completed crimp for good application.

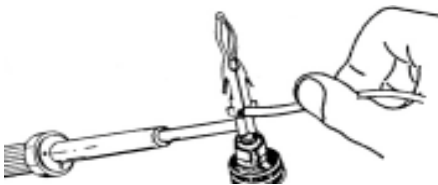

Packard Electric recommends that all hand-crimped connections be subsequently soldered. You can use your judgement as to whether this is necessary or not.

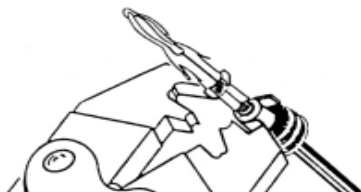

If you use a conventional crimping tool, crimp the wire core wings of the contact first. Use the nose of the crimpers to wrap the insulation wings of contact around seal. Examine crimp for good application then solder as above.